
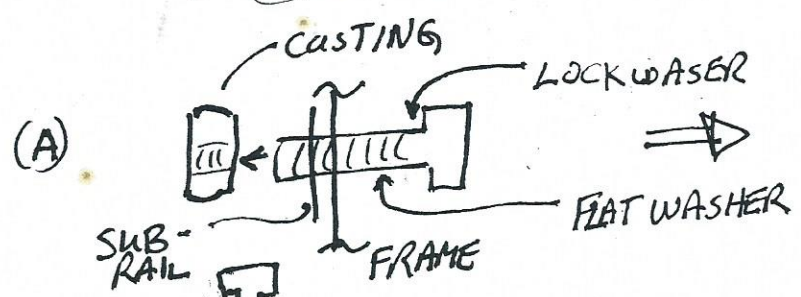


~~Need screws into~~  
B pillar Floor Mounting

New Nib  
SIDE HAS TO MOUNT WOOD


10-24 FOR CHECK STRAP (18) TAPPED  
SLOTTED SCREW ROUND TOP  
4 per car  
NOTE: CLOSED CARS = 7/8" 10-32

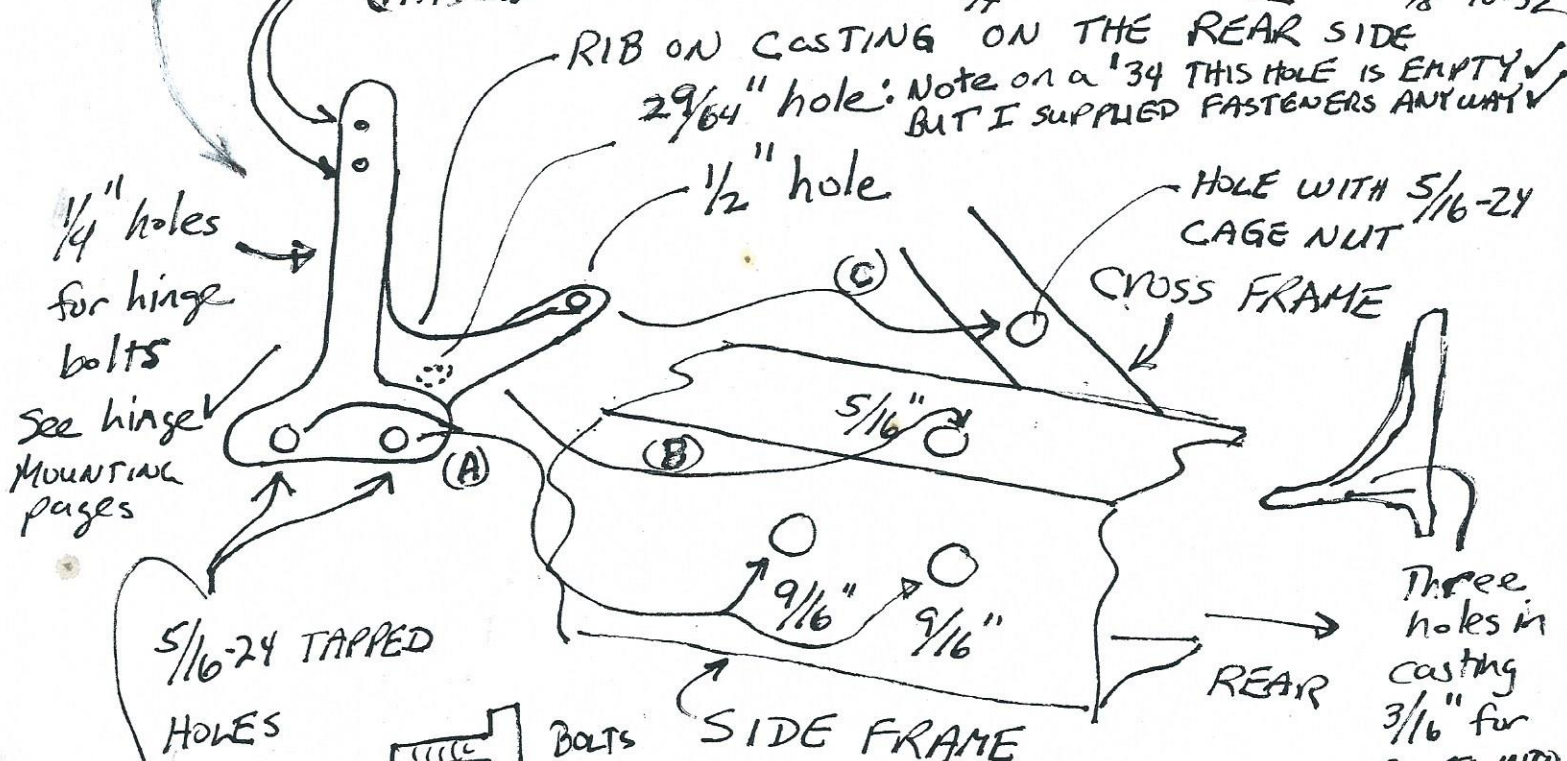

(15) LENGTH = 1 1/4"  
5/16-24 BOLT 4 per car + 4 lock + 4 flat washer



(16) LENGTH = 1 1/4"  
5/16-24 BOLT 2 per car + 2 lock + 2 HEX NUTS

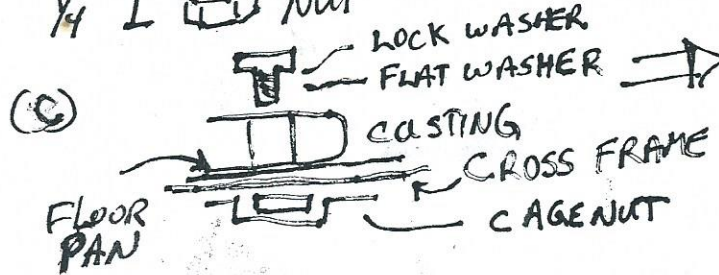

(17) LENGTH = 1 1/4"  
5/16-24 BOLT 2 per car + 2 lock + 2 Flat washers

NOTE ON ORIGINAL WOOD IN THE WAY FOR BOTH TO INSTALL. ONLY ONE INSTALLED EACH SIDE. ENCLOSED IS ENOUGH TO INSTALL CAR + RIDE... JUST NOTE H WOOD.